


Product Notice: New WarmWire Strap

The WarmWire Strap has improved. Some of the new features include:

- Ø Two rows of tabs: each row is off-set at right angles from each other allowing for easier installation for All wire spacing.
- Ø Longer, narrower tabs: more flexible tabs better accommodate larger wire sizes.
- Ø Wider strap: increased from 3/4" wide to 1-1/8" wide provides a flatter installation.
- Ø New installation methods: use a standard screw into floor or use the much easier 3M type 90 spray adhesive for secure attachment to hard surfaces such as concrete. Strap face down, spray back and floor at the same time, then flip strap over

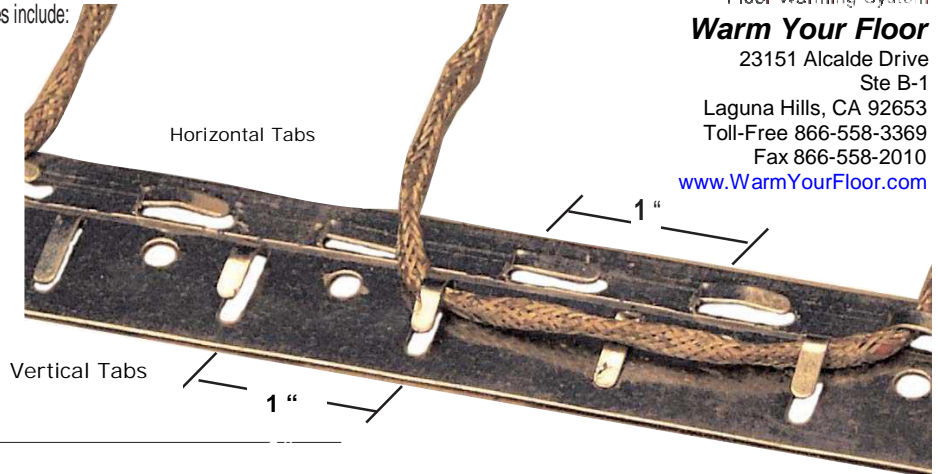

Warm Your Floor
23151 Alcalde Drive
Ste B-1
Laguna Hills, CA 92653
Toll-Free 866-558-3369
Fax 866-558-2010
www.WarmYourFloor.com

Installation

Unroll the Strap, cut it to the required length, and install. Secure the WarmWire cable to the strap at the necessary spacing. Make sure to fold the tabs securely over the wire.

The strap is designed with directional tabs to allow complete securing of the cables so they will not come loose during installation. "Vertical" tabs should point toward the wall, away from the heated area, allowing the cables to always pull against the tab as shown in the photos.

In the case of a long room or in areas where the cable may be run a long distance, install the Strap at either end of the room/run and lay all of the cable. If additional support is needed, cut a section of Strap and slide it upside-down underneath the cables (preventing the tabs from catching on the cable), flip it over, and secure. Connect the cable using the "horizontal" tabs.

- Ø If the mid-run Strap is installed before the cable, a "zigzag" pattern may form, making it harder to maintain proper wire spacing.

Strap Attachment Methods


- Plywood/Backerboard or similar: Screws, nails or staples may be used to secure the Strap to the substrate.
- Concrete/Thin Slabs or similar: A spray-on adhesive, such as 3M type 90, may be used. Galvanized self-tapping masonry screws may be used in addition to the adhesive, placed at either end of the Strap, to help hold the Strap in place while the adhesive cures.

Spray Adhesive

Spray the back side of the strap & subfloor thoroughly with the adhesive, attach and let cure for a minimum of 30 minutes, or per manufacture's recommendation. Place a screw at each end of the strap, if necessary.


Screws

Using galvanized self-tapping masonry screws, secure the Strap every 6-10 inches. Make sure the Strap does not lift or bend. If it does, add additional screws.

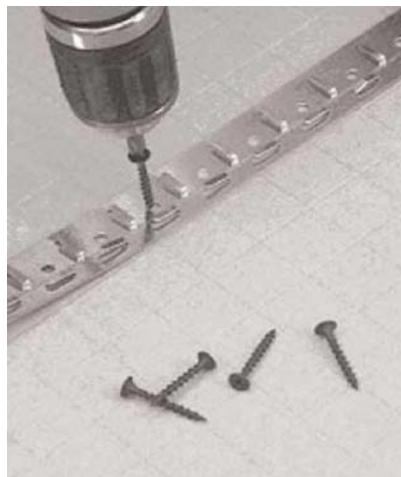


2" Spacing Configuration

Tab Sequence: Loop 3, Space 1
Use two vertical tabs.

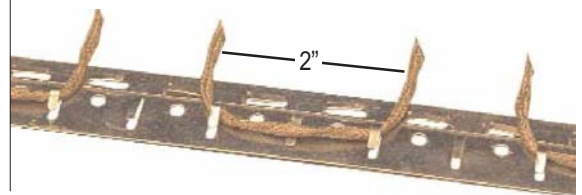


2-1/2" Spacing Configuration

Tab sequence: Loop 3, Space 2
Use one vertical tab and one horizontal tab

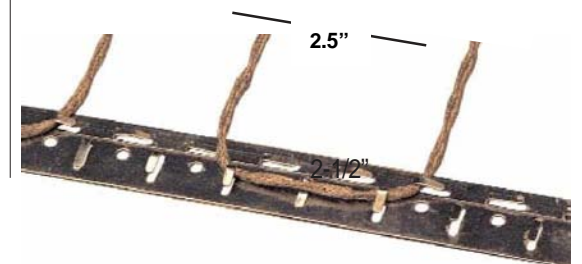

3" Spacing Configuration


Tab Sequence: Loop 4, Space 2
Use two vertical tabs.

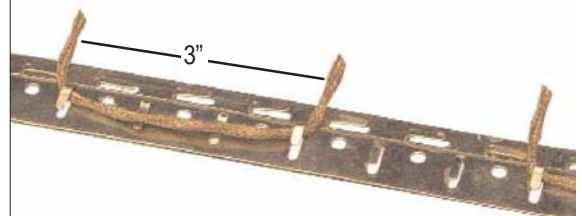

"Mid-Run" Strap Installation

Install Strap with the tabs down.

Then flip and push tabs down over wire.

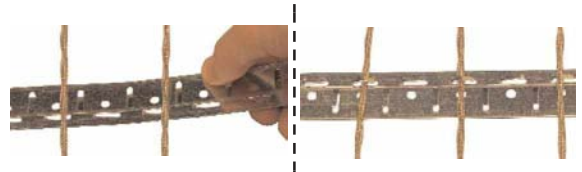

Product Ordering Information www.WarmYourFloor.com

Warm Wire Strap, 1-1/8" x 25' Item # 81005523